



CAST IN PLACE CONCRETE
AS REQUIRED BY DESIGN

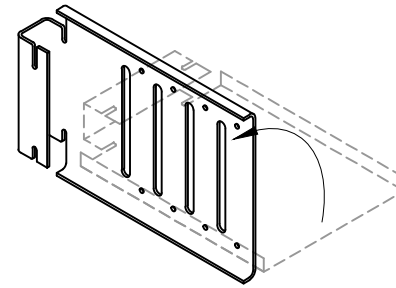


TO INSTALL CLIP INTO RAIL:

- START WITH CLIP PLACED HORIZONTAL
- INSERT CLIP INTO RAIL
- LINE UP SLOTS OF CLIP WITH RAIL RETURNS
- ROTATE CLIP SO IT'S VERTICAL

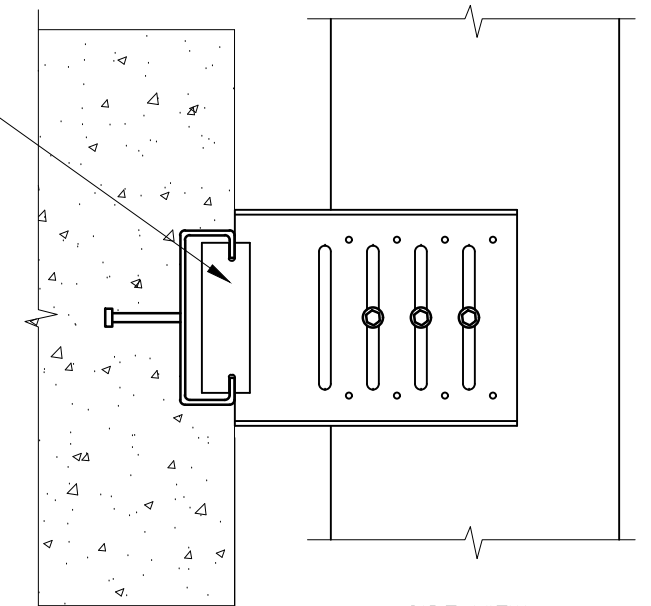


SIDE VIEW

1/8" MIN
TO 2-3/8" MAX

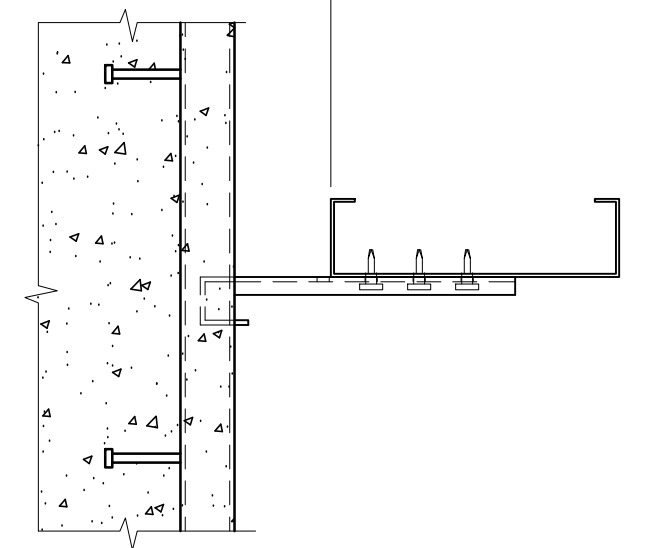

TOP VIEW

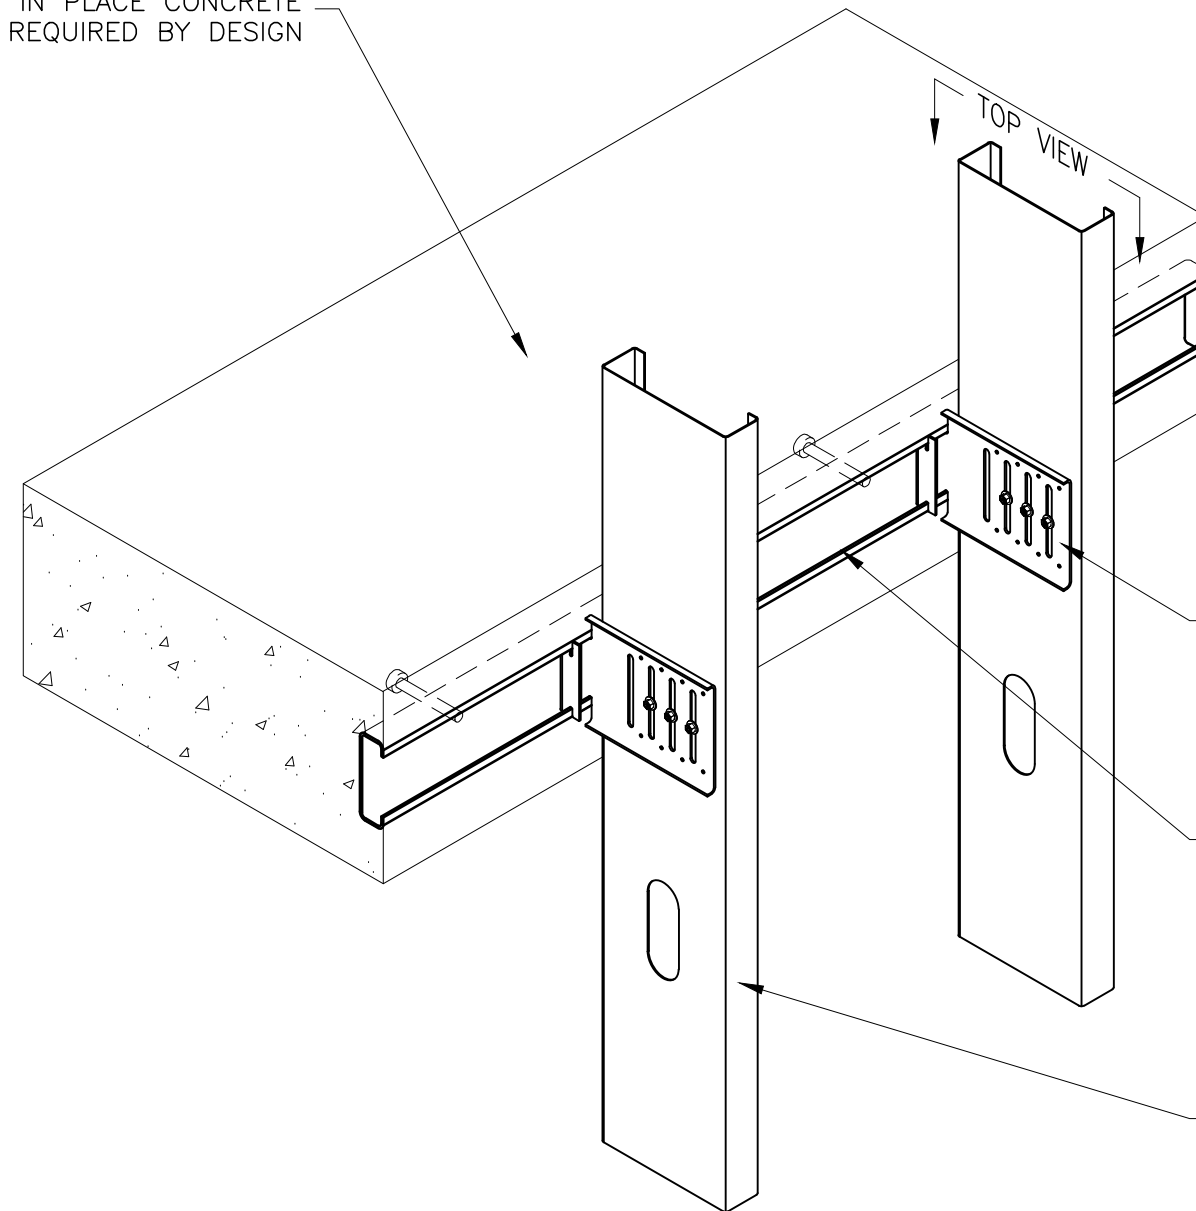

TOP VIEW

ClarkDietrich DRIFT CLIP DRC6-68 OR DRC6-97
ATTACHED TO STUDS W/(3) PROPRIETARY
DEFLECTION SCREWS (PROVIDED W/CLIP) IN
CENTER OF VERTICAL SLOTS. CLIP THICKNESS AS
REQ'D BY DESIGN.

ClarkDietrich 12' DRIFT HEADED RAIL 12GA
(97 MILS) CAST INTO CONCRETE AS REQ'D
BY DESIGN.

STRUCTURAL STUDS. SIZE AND
SPACING AS REQ'D BY DESIGN.

STUD CONNECTION W/DRC6-68 OR DRC6-97

ClarkDietrich DRIFT HEADED RAIL AND CLIP FOR 6" STUDS
CURTAIN WALL BYPASS WITH DRIFT & VERTICAL DEFLECTION



Engineering Services: (877) 832-3206

Technical Services: (888) 437-3244

The CAD detail library is intended to provide general framing details only and does not replace the judgments and designs of a qualified architect and/or engineer. The details are provided as a starting tool to assist the user in creating and detailing cold-formed steel framing construction details. Each detail including accompanying text must be thoroughly evaluated and approved by a qualified architect or engineer. | Find over 500 CAD details at cad.clarkdietrich.com | © Copyright 2026 ClarkDietrich